



# memo

## arrow buttons

 
- Normally used to adjust volume
- To listen to a short instruction press both buttons together for a short time
- To switch device ON or OFF press both buttons for 3 sec

## language selection

press the button until you hear your language

## navigation

- To memorize your current position press the M button followed by either of four buttons above.
- To navigate to a previously saved position, press the R button and then the one you have assigned to your target location. This will activate the navigation mode.
- To turn off navigation mode press the R button and then once again after the message.

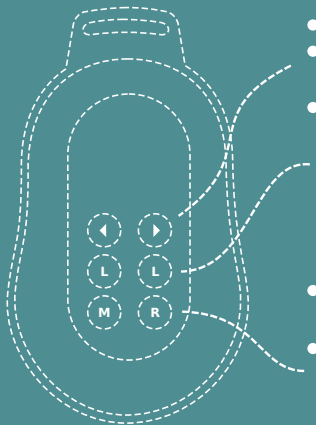

## short technical intro

Any GPS device usually needs to collect some amount of satellite data to determine its initial position. It names fixing. The fixing time depends on several parameters like weather, ionospheric conditions, sun activity and direct satellites visibility. For a faster fixing start your trip from any open place. It may take from 2min to 20min (at worst). Don't worry, you will hear an introduction to Prague while GPS module is initialising.

Once you are done using the device, drop it off at any of the following rental points:



or just call or send short message to **+420 608 432 890** and our courier will pick up the device anywhere you are within city center limits

from to



# memo

## GPS status indicator

- Blinking – collecting initial satellite data
- Fixed light – GPS initialised
- Off – battery depleted or device turned off

## reset

 
Wipe off all settings and restart the device

## charging indicator

- ON – device is charging
- OFF – charging complete

## beeper

- Once – button clicked
- Twice – button blocked (during the system message)
- Three times – device switching ON or OFF

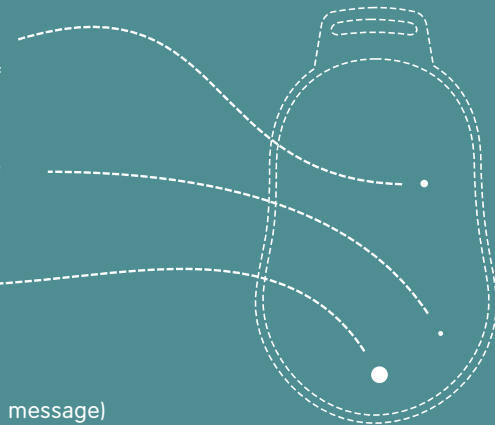

## several useful tips

- For a faster GPS fixing start walking as it helps collect satellite data more efficiently.
- When fixing is done you will hear the current date, time and a short message about this month in Prague. The red light at the back of the device will now stop blinking. After that satellite signals will be hard to lose.
- Missed a part of the story? Just switch language back and forth using the L buttons and the story about the current location will start from the beginning.
- If you keep walking slowly while listening to the story, the device will detect your direction and suggest further routes once the story finishes.
- If you have walked out of the location, the story will continue until the end of the current fragment and will then stop. If you'd like to hear the rest, just walk back – the story will resume after a confirmation message.

[www.electronicourgide.com](http://www.electronicourgide.com)